Model T-1410 Fully Transistorized Scintillation Voltage Divider

The T-1410 is for use with scintillation detectors coupled to 14-pin, 10-stage photomultiplier tubes (PMTs). The T-1410 is a plug-on PMT base/voltage divider. The plug-on models are easy to connect. You simply push the T-1410 onto the 14-pin PMT base.

Standard Features -

- Excellent stability with varying anode currents
- Very low power consumption
- Aluminum housing
- RoHS compliant
- Mount directly to a 14-pin base of a PMT or radiation detector.
- Optimized to work with Saint-Gobain Crystals standard detectors such as the 2M2/2 and 3M3/3 models.

Voltage Divider Specifications -


- Positive HV max: 1500V
- Transistorized High Voltage Divider
- Anode load resistor: 2.2MOhm (nominal)
- Signal connector: BNC
- High voltage connector: SHV
- Voltage ratio cathode to dynode 1 is 2R.
- Support for Anode Currents >50 uA
- Maximum operating temperature: -20°C +60°C
 Options -
- High voltage connector: SHV or MHV
- Signal connector: Other types available upon request.
- Conformal coating for high humidity applications.
- Negative high voltage option available (Model T-1410N)
- 8-Stage option available (Model T-1408)

Compatible Photomultiplier Tubes					
Size	ADIT Model	Burle Model	Electron Tubes Model	Hamamatsu Model	Photonis Model
2"	B51D01	S83019	9266K	R550, R2154	XP2201B, XP2202B, XP2203B, XP3230B, XP6202B
3"	B76B01	S83021	9305K		XP3330B, XP3332B, XP6302B
3.5"	B89B01	S83013	9306K		XP3730B, XP3732B
5"	B133D01	S83006	9390K	R877, R1513	XP3530B, XP3540B, XP3550B



Model T-1410 Transistorized Voltage Divider

Configuration -

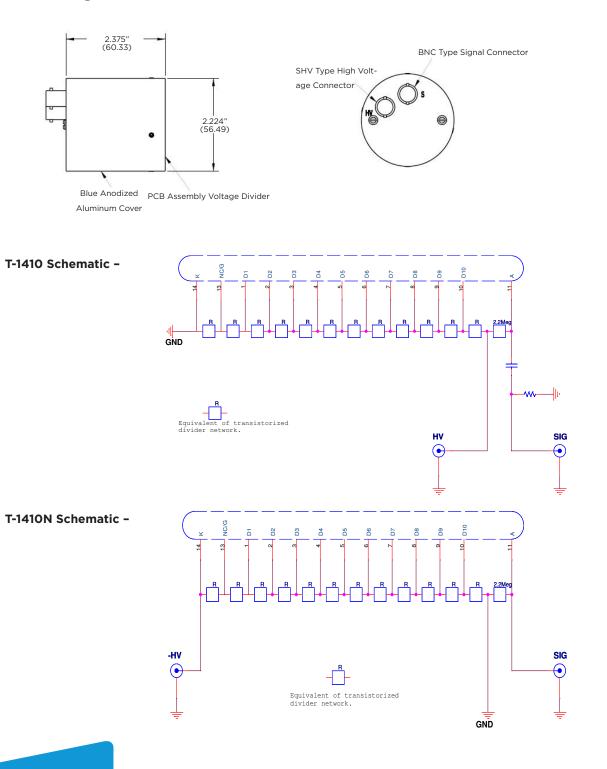

The drawing dimensions are nominal and subject to change. Call the factory for current values.



Saint-Gobain Crystals

www.crystals.saint-gobain.com

Manufacturer reserves the right to alter specifications. ©2009-2018 Saint-Gobain Ceramics & Plastics, Inc. All rights reserved.